


LED Steady/Flash & Electric Horn

QAD80H (Special Version)





Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.



Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the Power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the Power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

QAD80H -	12/24	-	R
[Model number]	[Voltage]		[Color]
1	1		1
• QAD80H	• 12/24-DC12V-24V		R-Red
(Special Version)			A-Amber
			G-Green
			B-Blue

Product Specifications

Model number	Voltage	Current	Sound pattern and volume	Certificates	Weight	Color
QAD80H	DC12-24V	Max. 990mA	Bit Input: 5Ch Binary Input: 30Ch Built-in sounds Max.100dB (Based on WM-Ch4)		0.70kg	R-Red A-Amber G-Green B-Blue

• Protection rating: IP65


• Ambient operating temperature : -30°C to +50°C





Please scan the QR code for more detailed product information.

vw.aliaht.com

Dimensions (Units : mm)






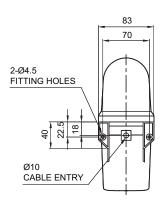


Wiring Instructions

QAD80H

External Contact

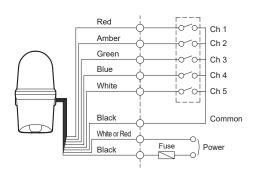

External transistor-NPN

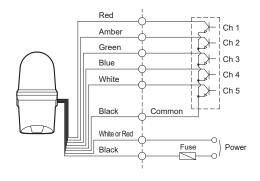

- External Power line UL1015 AWG18(0.75sq) x 2C 400mm External signal line UL1007 AWG22(0.3sq) 400mm
- This product can be wired regardless of polarity.


Bit/ Binary Input Method Depending on Wiring Method

■ Bit Input Mode


- Bit input mode(using external line) allows you to select one of five sound options by switching on one of the 5 channels.
 (Ch1 - Ch5)
- Total of 5 sound options are configurable.

■ Binary Input Mode

- Binary input mode(using external line) allows you to receive multiple inputs by using the 5 channels (Ch1 - Ch5) to configure one of 30 sound options.
- Total of 30 sound options are configurable.

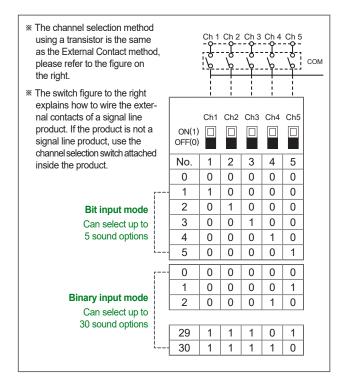


Parts Definition/Installation

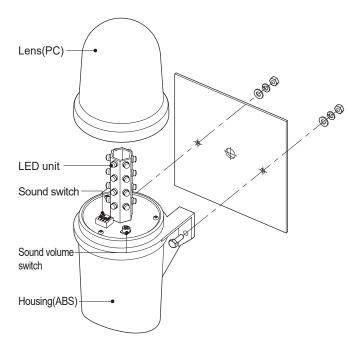


- First, machine taps or holes on the mounting surface.
- The mounting hole of this product is 6mm in diameter.
- When machining taps, fasten the bolt through the mounting hole of the product.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface.
- Install a flat washer and a spring washer to the bolt if the product can experience severe vibration and shock.

Mounting Hole Specifications


 Machine holes on the mounting surface referring to the diagram below.

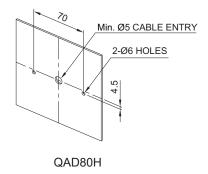

Top Control Configuration

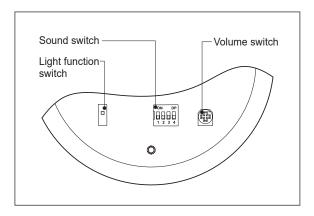

Sound Setting



- Built-in sounds can be selected by using a switch either bit or binary sounds.
- Please be conscious of the number selected for your desired sound option.
- Switch No. 1 : Select Bit or Binary
- Switch No. 2,3,4: Select Built-in sound group

■ Select built-in Bit sound group

- □It is being used when built-in sound is selected.
- □Select between the six sound groups.
- Every group has 5 type of sounds.

	How to select bit type sound group					
ON(1) OFF(0)	2	3	4	Sounds		
No.	2	3	4			
1	0	0	1	5 Warning Sounds		
2	0	1	0	5 Special Warning Sounds (1st Group)		
3	0	1	1	5 Melodies		
4	1	0	0	5 Alarms		
5	1	0	1	5 Special Warning Sounds (2nd Group)		
6	1	1	0	5 Special Warning Sounds (3rd Group)		

■ Select built-in Bit sound group or Binary sound group




- In bit input mode, Please set switch no.1 to off(0).
- In binary input mode, Please set switch no.1 to ON(1).

Installation Environment and Protection Rating

- This product is designed for use with protection rating of IP65.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP65), it may cause malfunction or damage to the product.
- In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upside-down positions where water can potentially penetrate into the product and impact it's operation.
- For further information, please visit our website(www.qlight.com).


Volume Adjustment


- The volume output of this product is adjustable.
- Turn the volume dial clockwise to increase the volume, and turn counter clockwise to decrease the volume.
- There will be no sound when the dial is put at MIN.

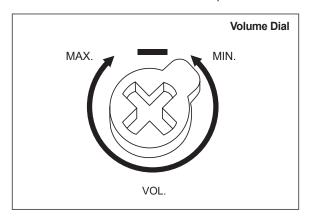

Light Function Selection

 Please refer to the chart below to use light function selection switch located inside the product.





▶ L : Steady

▶ LF : Flashing

• Default function is set at steady LED. Select the desired function for your application during installation.

Sound Type and Combination Manual

■ Bit Input - Playing Built-in Sound

- In bit input mode, you can chooses one sound from 30 sounds by configuring the 5 channels.
- For sound configurations, refer to the table below.

	Bit input method sound configuration					
ON(1) OFF(0)	Ch1	Ch2	Ch3	Ch4	Ch5	Type of sound (WS group as an example)
No.	1	2	3	4	5	
0	0	0	0	0	0	No sound
1	1	0	0	0	0	Fire.A-ANG(560Hz-1.5kHz)
2	0	1	0	0	0	Emergency WA-U (600Hz-1.5kHz)
3	0	0	1	0	0	Ambulance PI-PO (450Hz-900Hz)
4	0	0	0	1	0	Machinery Fault(820Hz)
5	0	0	0	0	1	High Expansion(1kHz)

^{**} Please be noted that the configuration chart above is explaining how to wire terminal blocks. The actual product does not have a switch.

■ Sound Type by Group

	Bit input method sound configuration					
Group		Channel	Type of sound			
		Ch1	Fire.A-ANG (560Hz-1.5kHz)			
		Ch2	Emergency WA-U (600Hz-1.5kHz)			
ws	5 Warning Sounds	Ch3	Ambulance PI-PO (450Hz-900Hz)			
	Counds	Ch4	Machinery Fault (820Hz)			
		Ch5	High Expansion (1kHz)			
		Ch1	Fire.A-ANG (560Hz-1.5kHz)			
	5 Special	Ch2	Abandon Alarm (820Hz)			
WP	Warning Sounds	Ch3	Machinery Fault (820Hz)			
	(1st Group)	Ch4	High Expansion (1kHz)			
		Ch5	7 Short Pl. / 1 Long (1kHz)			
		Ch1	Sweet Home			
		Ch2	For Elise			
WM	5 Melodies	Ch3	Cuckoo's Waltz			
		Ch4	Piano Sonata			
		Ch5	Turkish March			
	5 Alarms	Ch1	Beep Intermittent			
		Ch2	Door Chime			
WA		Ch3	Phone Ring			
		Ch4	PI.PI.PI Short			
		Ch5	Tripping Beat			
		Ch1	Rel rel (730Hz-920Hz)			
	5 Special Warning Sounds (2 nd Group)	Ch2	Slow Ambulance PI-PO (820Hz-1.05kHz)			
WO		Ch3	Wye yong Wye yong (770Hz-1.2kHz)			
		Ch4	Phone ring 2 (740Hz-910Hz)			
		Ch5	Fire.A-ANG (770Hz-1.11kHz)			
	5 Special Warning Sounds (3 rd Group)	Ch1	Oit Oit (500Hz-1.11kHz)			
		Ch2	Pi o Pi o (940Hz-2.19kHz)			
WN		Ch3	Slow Di o Di o (680Hz-840Hz)			
		Ch4	Li long Li ling (420Hz-470Hz)			
		Ch5	911 Siren (150Hz-1kHz)			

■ Binary Input - Playing Built-in Sound

- In binary input mode, you can chooses one sound from 30 sounds by configuring the 5 channels.
- · For sound configurations, refer to the table below.
- Please be aware that the configuration for sound using the binary input method is different from the bit input method.

	Binary input method sound configuration						
ON(1) OFF(0)	Ch1	Ch2	Ch3	Ch4	Ch5	Type of sound	
No.	1	2	3	4	5		
0	0	0	0	0	0	No sound	
1	0	0	0	0	1	Fire.A-ANG (560Hz-1.5kHz)	
2	0	0	0	1	0	Emergency WA-U (600Hz-1.5kHz)	
3	0	0	0	1	1	Ambulance PI-PO (450Hz-900Hz)	
4	0	0	1	0	0	Pi-ik Pi-ik (800Hz)	
5	0	0	1	0	1	Machinery Fault (820Hz)	
6	0	0	1	1	0	High Expansion (1kHz)	
7	0	0	1	1	1	Alarm (1kHz)	
8	0	1	0	0	0	Sweet Home	
9	0	1	0	0	1	For Elise	
10	0	1	0	1	0	Cuckoo's Waltz	
11	0	1	0	1	1	Piano Sonata	
12	0	1	1	0	0	Turkish March	
13	0	1	1	0	1	Magic Flute	
14	0	1	1	1	0	Badinerie	
15	0	1	1	1	1	Pineapple Rag	
16	1	0	0	0	0	Beep Intermittent	
17	1	0	0	0	1	Door Chime	
18	1	0	0	1	0	Phone Ring	
19	1	0	0	1	1	PI.PI.PI Short	
20	1	0	1	0	0	Tripping Beat	
21	1	0	1	0	1	Rel rel (730Hz-920Hz)	
22	1	0	1	1	0	Slow Ambulance PI-PO (820Hz-1.05kHz)	
23	1	0	1	1	1	Wye yong Wye yong (770Hz-1.2kHz)	
24	1	1	0	0	0	Phone ring 2 (740Hz-910Hz)	
25	1	1	0	0	1	Fire.A-ANG (770Hz-1.11kHz)	
26	1	1	0	1	0	Oit Oit (500Hz-1.11kHz)	
27	1	1	0	1	1	Pi o Pi o (940Hz-2.19kHz)	
28	1	1	1	0	0	Slow Di o Di o (680Hz-840Hz)	
29	1	1	1	0	1	Li long Li ling (420Hz-470Hz)	
30	1	1	1	1	0	911 Siren (150Hz-1kHz)	

^{**} Please be noted that the configuration chart above is explaining how to wire terminal blocks. The actual product does not have a switch.

Operation Method and Setting

When using a built-in sound					
Bit input	Binary input				
Organized into 6 groups of 5 sound tones for a total of 30 sound tone options. Play one of the five sounds in each 5 group	Play one of 30 built-in sounds				

■ When Using a Built-in Sound in Bit Input Mode

※ Sound switch setting → Channel selection

- 1. Set the No. 1 switch of the Sound setting switch to OFF.
- For more information, see page 3 'Sound Settings'.
- 2. Use one of the sound setting switches 2, 3 and 4 to select one of the 6 groups.
- For more information, see page 3 'Sound Settings'.
- 3. Use the sound select switch to select one of the five built-in sounds.
- For more information, please refer to page 4 'Bit Input Playing Built-in Sound'.
- For external signal line type (LC) products, please refer to page 2 'Bit/ Binary Input Method Depending on Wiring Method'.

■ When Using a Built-in Sound in Binary Input Mode

※ Sound switch setting → Channel selection

- 1. Set the No. 1 switch of the sound setting switch to ON.
- For more information, see page 3 'Sound Settings'.
- 2. Use the sound select switch to select one of the 30 built-in sounds.
- For more information, please refer to page 5 'Binary Input -Playing Built-in Sound'.
- For external signal line type (LC) products, please refer to page 2
 'Bit/ Binary Input Method Depending on Wiring Method'.


Product installation direction

■ Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.

· BEACON/SIGNALING LIGHT

* For products with a protection rating of less than IPX4, please install it vertically.


Power cord inlet part shall not be facing the sky.

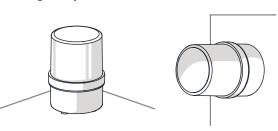




· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.
















· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS

Sounder part shall not be facing the sky.






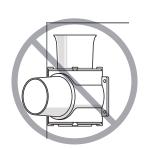

· SIGNAL TOWER LIGHTS

Power cord inlet part shall not be facing the sky.

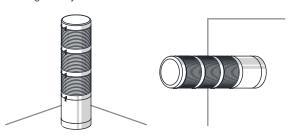



Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. Please read the instruction manual attached to the product carefully before installation and use.

MIMIC COMPONENTS sales@mimic.co.za www.mimic.co.za 5 Ramsay Street, Booysens 2091, Johannesburg P.O. Box 38493, Booysens 2016, Johannesburg, South Africa

/ TEL: +27(0)11 689-5700

Johannesburg Branch

MIMIC COMPONENTS

Cape Town Branch

Mimic Cape

